


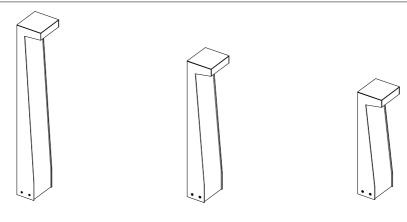

**OPERATION TEMPERATURE** 





## **INSTALLATION INSTRUCTIONS**

**DISCLAIMER** 

 
Please read all instructions before beginning installation:

 
- 1. Turn off electrical Power before starting the installation of the light fixture.
- 2. The feeding voltage must not exceed the specified fixture voltage.
- 3. This product must be installed by an eligible electrician.
- 4. Make sure the luminaire is mounted to a secure structure. Mounting the fixture in inappropriate way could lead to serious injury.
- 5. This luminaire is class 1, it must be earthed in a reliable way.
- 6. Wear gloves and safety glasses at all times when removing the luminaire from carton,installing, servicing or performing maintenance
- 7. Do not install damaged product! This luminaire is properly packed to avoid being damaged during transit. Inspect to confirm before installation. Any damaged or broken part during or after assembly should be replaced.
- 8. Unauthorized repairs or modifications will void warranty.

 













Dimensions in mm




# 1.Prepare the ground and the cable with a proper drainage system Туре Application Cable Note Non Dimmable Power H07RN F 3G1.0 mm<sup>2</sup> L/N/PE Power & Control H07RN F 5G1.0 mm<sup>2</sup> L/N/PE/DA/DA DALI Power H07RN F 3G1.0 mm<sup>2</sup> L/N/PE 1-10V H07RN F 2x1.0 mm<sup>2</sup> DIM+ / DIM-Drainage

### 2.Make 4 holes in the surface for M6X50

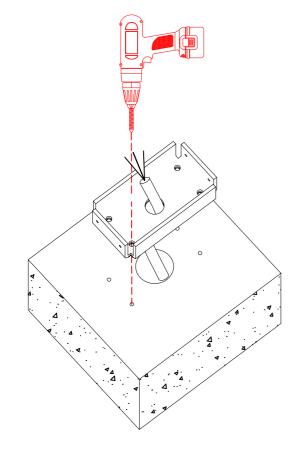




### 3.insert Power feeding and control canle in the base

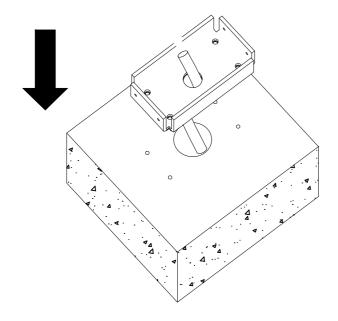

4.Screw in M6x50 screws Qty 4 (provided by installer)

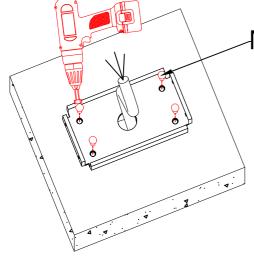

M6x50 provided by installer



