Product Installation guide




















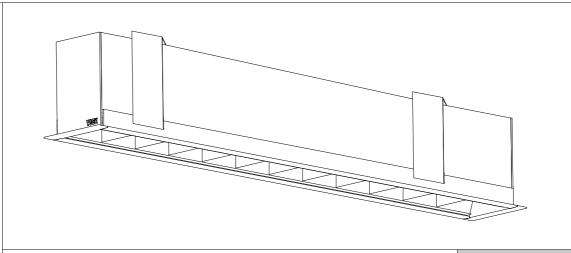


INSTALLATION INSTRUCTIONS

DISCLAIMER


Please read all instructions before beginning installation:

- 1. Turn off electrical power before starting the installation of the light fixture.
- 2. The feeding voltage must not exceed the specified fixture voltage.
- 3. This product must be installed by an eligible electrician.
- 4. Make sure the luminaire is mounted to a secure structure. Mounting the fixture in inappropriate way could lead to serious injury.
- 5. This luminaire is class 1, it must be earthed in a reliable way.
- 6. The light source of this luminaire shall only be replaced by the manufacturer, his service agent or a similar qualified person.
- 7. Wear gloves and safety glasses at all times when removing the luminaire from carton, installing, servicing or performing maintenance
- 8. Do not install damaged product! This luminaire is properly packed to avoid being damaged during transit. Inspect to confirm before installation. Any damaged or broken part during or after assembly should be replaced.
- 9. Unauthorized repairs or modifications will void warranty.

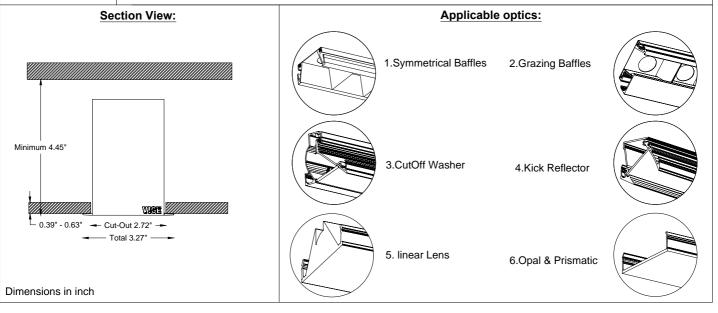




Product Installation guide

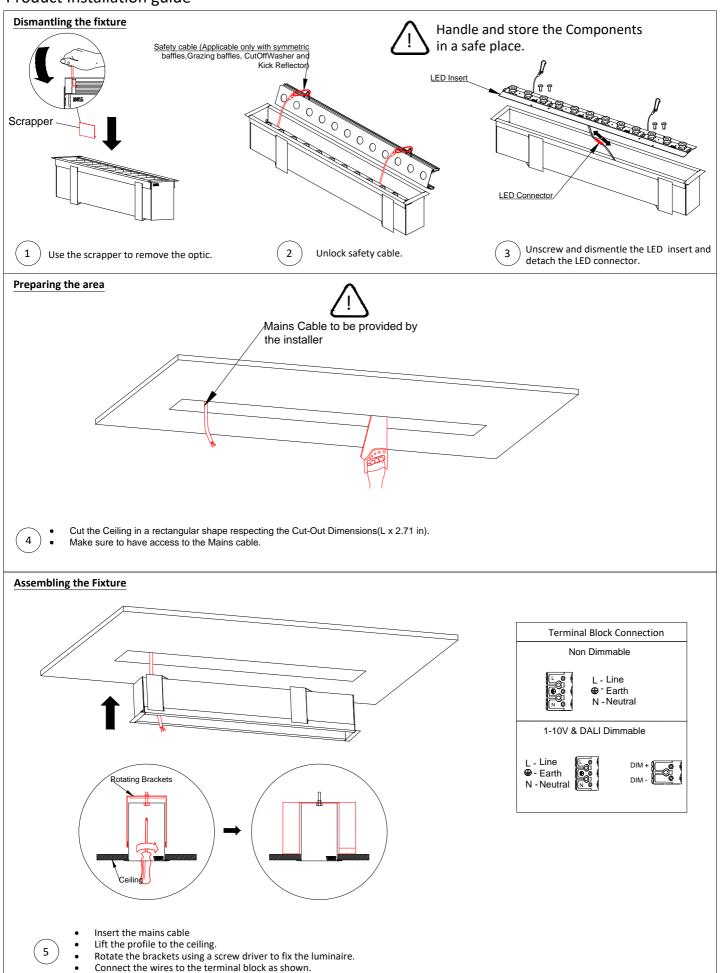



Product Installation guide

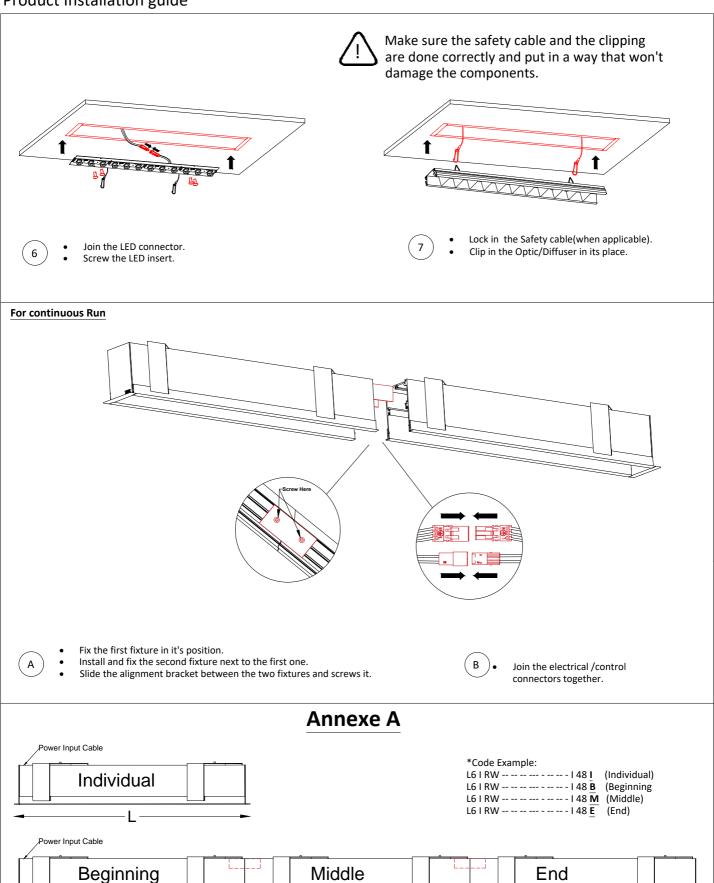

L2



L1

L1

Product Installation guide

Length Code*	L (Inch) (Two End Caps)	L1 (Inch) (One End Cap)	L2 (Inch) (No End Cap)
12	12.9	12.30	11.70
24	24.50	23.90	23.20
36	36.10	35.40	34.80
48	47.60	47	46.40
60	59.20	58.60	58.00
70	70.80	70.20	69.50
82	82.40	81.70	81.10
93	93.90	93.30	92.70
105	105.50	104.90	104.30
116	117.10	116.50	115.80

^{*}Code Example: L6 I RW -- -- -- -- - I 48 -




For the continuous make sure not to exceed 600W on a single feeding input.

Annexe B

Asymmetrical optics:

Below section views shows the light direction and the power feeding location for the asymmetrical optic.

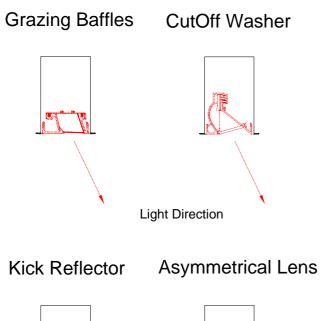





Light Direction

